


Knock Monitor Connection for Nissan SR20

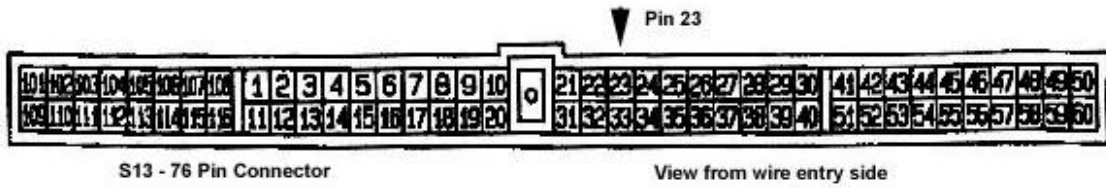

Identify the knock sensor signal wire from the above diagram and connect the white wire from the supplied harness to it. A splice connector is supplied for use if desired.

Car	Model Number	Engine Code	Year
Sylvia	S13 / S14	SR20DET	1991 - 96
200SX	S14A	SR20DET	1996- 99
200SX	S15	SR20DET	1999 - 2001